

coilshield® fitting instruction

Step 1




Place outer shield onto top surface of coil.
(12 o'clock position)

Press shield firmly against front face of coil.

Note. **The outer shield is self-supporting at this stage.**

Step 2

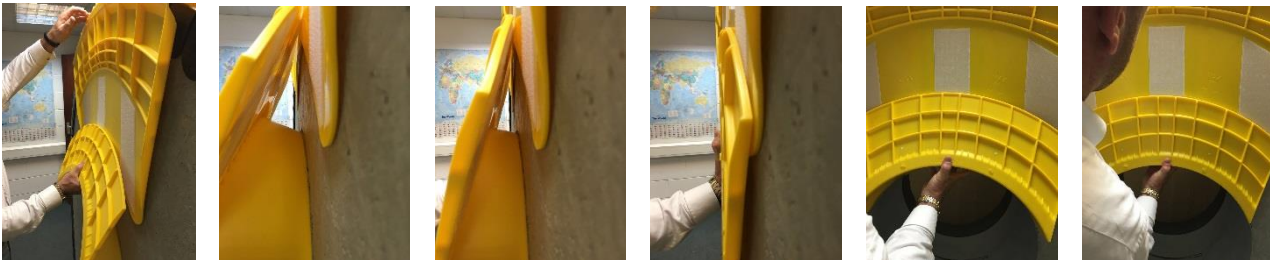

Offer inner shield into bore of coil, hold at slight angle as two parts meet. This will give a cam effect as the two parts press together creating a clamp against the coil. Press the inner shield until it is firmly against internal diameter wall of the bore.

Note. **Take care to ensure any loose packaging or coil leaf is pressed firmly against coil bore.**

Step 3



Check for tight fitting to ensure coilshield® is now correctly fitted.

removal

Step 1



Remove coilshield® as single item

i.e. Outer shield and inner shield remain connected with Velcro.

Step 2



Separate outer shield from inner shield whilst on floor.

Step 3

Store components safely.